

REINFORCING NOTES:

SCHEDULE.

1. SEE "GENERAL NOTES" FOR REINFORCING REQUIREMENTS.

- 2. SEE "TYPICAL POST-TENSIONED SLAB DETAILS" FOR ADDITIONAL INFORMATION.
- 3. SLAB REINFORCING SHALL BE PLACED IN THE FOLLOWING SEQUENCE: BOT BARS IN DIRECTION OF DISTRIBUTED TENDONS BOT BARS IN DIRECTION OF BANDED TENDONS TOP BARS IN DIRECTION OF BANDED TENDONS
- TOP BARS IN DIRECTION OF DISTRIBUTED TENDONS 4. RX INDICATES STUD RAIL. STUD RAILS SHALL BE PLACED AT ALL COLUMNS. SEE
- 5. SEE "TYPICAL CONCRETE OPENINGS AND EMBEDMENTS" FOR ADDITIONAL REINFORCEMENT REQUIREMENTS. NOTIFY STRUCTURAL ENGINEER OF ANY OPENINGS NOT SHOWN ON THE STRUCTURAL DRAWINGS FOR WHICH THE TYPICAL DETAILS DO NOT APPLY. ADDITIONAL REINFORCEMENT MAY BE REQUIRED.

"TYPICAL STUD RAIL REINFORCEMENT AT COLUMNS" DETAIL AND STUD RAIL


- 6. WHERE BAR LENGTH CANNOT BE ACHIEVED DUE TO SLAB EDGE, HOOK BAR.
- 7. WHERE NOTES AS "HOOKED", PROVIDE 90 OR 180 DEGREE HOOK AS SHOWN ON PLAN. NOTED BAR LENGTH IS LENGTH OF STRAIGHT PORTION OF BAR.
- 8. PROVIDE INTEGRITY BOTTOM BARS PER STUD RAIL SCHEDULE AT ALL COLUMNS. CENTER REINFORCEMENT ON COLUMNS AND PLACE INTEGRITY BARS EACH WAY WITHIN COLUMN VERTICAL REINFORCEMENT. TRIM AND HOOK AT SLAB EDGE AS


TOWER C - LEVEL 6 - REINFORCEMENT PLAN

1/8" = 1'-0"

PT TOP REINFORCEMENT SCHEDULE							
MARK	REINFORCING	REMARKS					
PT1	(6) #5x10'-0"						
PT2	(6) #5x15'-0"						
PT3	(8) #5x15'-0"						
PT4	(12) #5x10'-0"						
PT5	(10) #5x15'-0"						
PT6	(18) #6x12'-0" @ 5"	STAGGER 3'-0"					
PT7	(14) #5x10'-0"						
PT9	(14) #6x15'-0"						
PT11	(13) #6x15'-0"						
PT12	(10) #5x12'-0"						
PT30	#5x10'-0"@ 15"						
PT32	#6x12'-0"@ 6"						
PT50	(4) #5x6'-8"	HOOK AT END					
PT51	(6) #5x6'-8"	HOOK AT END					
PT52	(10) #5x9'-2"	HOOK AT END					
PT54	(6) #5x14'-2"	HOOK AT END					
PT56	(16) #5x11'-2"	HOOK AT END					
PT57	(10) #5x14'-2"	HOOK AT END					
PT60	(12) #5x9'-2"	HOOK AT END					
PT80	#5x11'-2" @ 10"	HOOK AT END					
PT81	#5x6'-8" @ 10"	HOOK AT END					
PT82	#6x9'-0"@ 4"	HOOK AT END					
PT83	#6x9'-0" @ 6"	HOOK AT END					

TOP REINFORCEMENT SCHEDULE]	PT BOTTOM REINFORCEMENT SCHEDULE			
	REINFORCING	REMARKS		MARK	REINFORCING	REMARKS	
	(6) #5x10'-0"			PB1	#5x10'-0" @ 6"		
	(6) #5x15'-0"			PB4	#4x6'-10" @ 12"	HOOK AT END	
	(8) #5x15'-0"		1	PB5	#5x6'-8" @ 6"	HOOK AT END	
	(12) #5x10'-0"			PB7	#5x20'-0" @ 12"		
	(10) #5x15'-0"			PB8	#7x20'-0" @ 12"		
	(18) #6x12'-0" @ 5"	STAGGER 3'-0"		PB9	#7x20'-0" @ 6"		
	(14) #5x10'-0"			PB10	#6x20'-0" @ 6"		
	(14) #6x15'-0"			PB13	#5x15'-0" @ 24"		
	(13) #6x15'-0"			PB14	#5x15'-0" @ 12"		
	(10) #5x12'-0"			PB15	#7x10'-0" @ 8"		
	#5x10'-0"@ 15"			PB16	#7x6'-4" @ 8"	HOOK AT END	
	#6x12'-0"@ 6"			PB17	#5x10'-0" @ 12"		
	(4) #5x6'-8"	HOOK AT END		PB18	#7x10'-0" @ 12"		
	(6) #5x6'-8"	HOOK AT END					
	(10) #5x9'-2"	HOOK AT END	1				
	(6) #5x14'-2"	HOOK AT END					
	(16) #5x11'-2"	HOOK AT END	1				

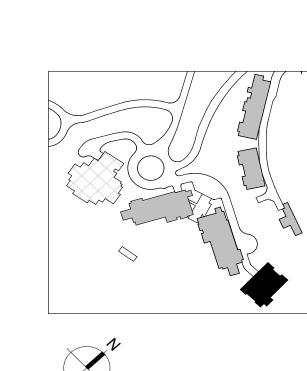

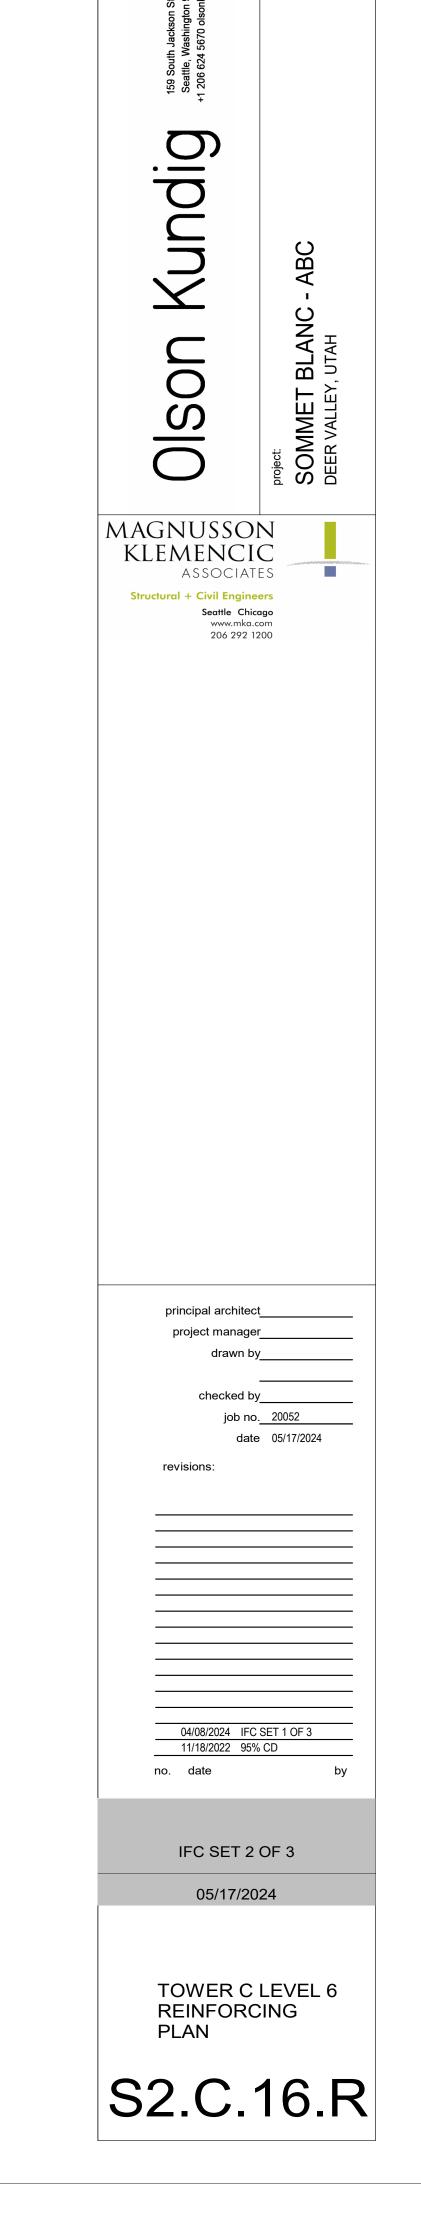

Reserved for permit stamp